


Using Teranex Mini Smart Panel

An optional Teranex Mini Smart Panel can be mounted to the front of your Web Presenter, replacing the original front panel. The Smart Panel buttons allow you to switch sources, together with a built in LCD so you can monitor the input video and status information such as the input video source, video format, plus the USB output frame rate.

Installing Teranex Mini Smart Panel

Installing your optional Smart Panel is easy and because the panels are hot swappable you don't even need to turn off your Blackmagic Web Presenter when installing it.

- 1 Remove the two M3 screws on each side of your Web Presenter's basic front panel using a Pozidriv 2 screwdriver and gently pull the panel away from the front of your Web Presenter.
- 2 Remove and retain the light tube connecting the LED to the indicator at the bottom of the basic panel. This tube is necessary to illuminate your Web Presenter's status indicator when the Smart Panel is not installed.
- 3 Align the connector on the rear of the Smart Panel with the adjoining connector on the face of your Blackmagic Web Presenter and gently push the Smart Panel towards the unit until the connectors are firmly seated. The Smart Panel should make a firm connection and fit neatly inside the face of your Web Presenter.
- 4 Re-insert the M3 screws from the original panel.

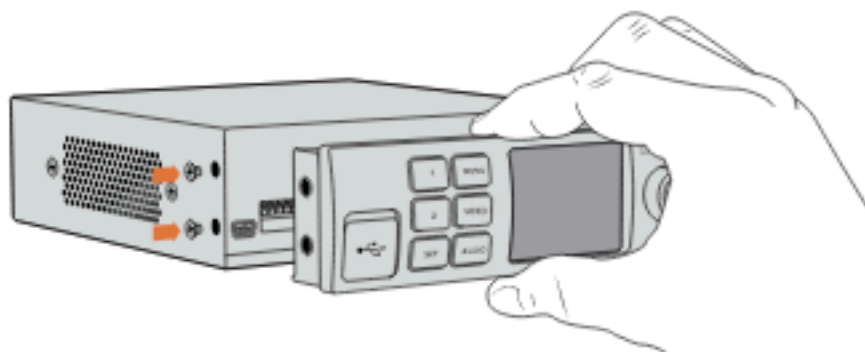

When installing the Teranex Mini Smart Panel to your Blackmagic Web Presenter, holding the panel with your fingers and thumb aligned with the panel's rear connector will help guide it into place

If your Blackmagic Web Presenter is installed in a Teranex Mini Rack Shelf, you will need to remove the Web Presenter from the rack shelf to access the front panel screws. See the "Teranex Mini Rack Shelf" section for more information. Your Web Presenter's USB port is still accessible with the Smart Panel attached. To access the port, simply open the rubber USB dust cover.